



EMCO SPECIALTY PRODUCTS, INC.

408 MIAMI AVE. KANSAS CITY, KS 66105 - 913-281-4555 / FAX. 913-281-4554

HINGED COAT RACK INSTALLATION INSTRUCTIONS

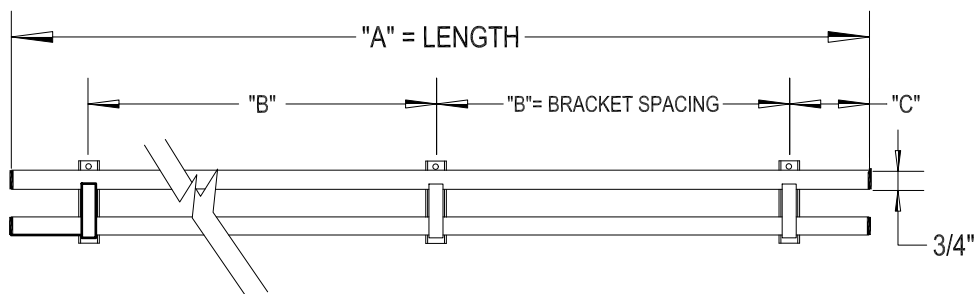

WALLSTRIP SECUREMENT HOLES:
DRILL TO FIT A #10 ROUND HEAD SCREW
(WALL FASTENERS BY OTHERS)

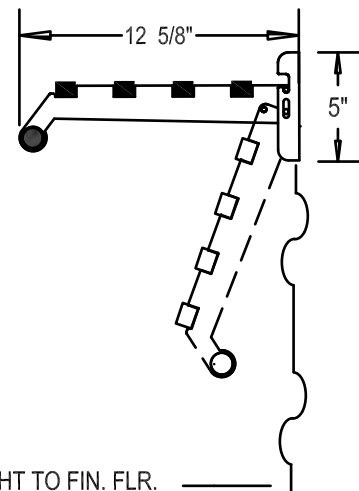

SUGGESTED HEIGHT TO FIN. FLR.
42" (A.D.A.REQUIREMENT)

1. DETERMINE LOCATION AND HEIGHT OF BRACKETS (SEE NOTES ON SUGGESTED HEIGHT).
2. MARK LOCATION OF BRACKETS ON THE WALL USING A CARPENTERS LEVEL TO ENSURE THEY ARE INSTALLED AT THE SAME LEVEL AND PERPENDICULAR TO THE FLOOR. BRACKET SPACING "B" IS LISTED ON THE CUSTOMER COPY OF THE PICKING TICKET AND MUST BE ADHERED TO FOR PROPER SHELF SUPPORT.
3. PREPARE HOLES AND MOUNT AS FOLLOWS: (FASTENERS BY OTHERS).
 - A. FOR WALLS WITH WOOD STUDS - PREDRILL A 5/32" HOLE 1 1/2" DEEP AND ATTACH WITH #10 X 1 3/4" PAN HEAD WOOD SCREW.
 - B. FOR WALLS OF HOLLOW MATERIAL SUCH AS TILE - USE 3/16 SPRING WING TOGGLE AND ATTACH WITH 10-24 X 3" PAN HEAD BOLT.
 - C. FOR WALLS OF SOLID MATERIAL SUCH AS CONCRETE, BRICK, STONE, ETC, USE A #10 DEDICATED MASONRY SCREW A MINIMUM OF 1 1/2" LONG.
4. IF COAT RACK IS TO BE INSTALLED IN A CONFINED AREA SUCH AS A CLOSET, BE SURE TO INSERT THE HANGER ROD IN BRACKETS PRIOR TO ATTACHING TO THE WALL.
5. AFTER ALL BRACKETS ARE INSTALLED PLACE SLATS ON BRACKETS AND SECURE BY INSERTING #8 X 1" SCREW IN CORRESPONDING HOLE UNDER THE BRACKET, AND TIGHTENING WITH A PHILLIPS HEAD SCREWDRIVER. WHEN TIGHTENING SLAT IT SHOULD BE HELD TIGHT TO THE BRACKET WITH YOUR HAND. THIS WILL INSURE PROPER SEATING.
6. SECURE HANGER ROD TO BRACKETS USING #6-32 X 1/4" SCREW.

CAUTION: DO NOT OVER TIGHTEN THE SCREWS SECURING THE SLAT AS IT WILL STRIP THE SCREW AND PREVENT IT FROM HOLDING THE SLAT IN PLACE.